

# Self Diagnostics Failure Code Explanation

This oven monitors its operation and displays a Failure Code in the display window when a problem occurs

## What to do when a failure code appears:

CODE	CAUSE	WHAT TO DO
F01	<ul style="list-style-type: none"><li>Overcooked food.</li><li>Temperature of exhaust air tool high</li></ul>	<ul style="list-style-type: none"><li>Press STOP/CLEAR TIME pad to stop beep.</li><li>Wait for oven to cool down and reset</li><li>If a flame is present, do not open oven door.</li><li>If normal operation does not resume, call the service agent with information of failure code.</li></ul>
F33-34	<ul style="list-style-type: none"><li>Defective sensor circuit</li></ul>	<ul style="list-style-type: none"><li>Unplug the oven and wait more than 10 seconds before reconnecting</li><li>If normal operation does not resume, call the service agent with the information of failure code.</li></ul>
F44	<ul style="list-style-type: none"><li>When a pad was pressed for more than 30 seconds</li><li>Defective pad or control circuit</li></ul>	

NOTE: Above codes shown in display do not indicate all the possible failures on the unit.